



A. Info
Press the Info Button (A) to switch between the pages **Main overview** and **Main Index**.

1 Log in
1.1 On page **Main Overview** select **Password enter** and press OK (E).
1.2 Turn the Navigations-Button (E) to enter your password (password = 1000) afterwards press OK (E). A key symbol is now shown in the top left corner of the display window (C).
Caution: Please always login

B. Alarm
Flashing red in the event of an alarm.

C. Display window

D. ESC
Press once to return to previous menu/page, and to abort

E. Navigations and OK- Button
Turn to go up or down in menus.
Press button to enter a menu, go to next page or to confirm your entry.
Turn to change value.

6 Scheduler
6.1 Select on page **Main Index** the menu item **Time scheduler** and press OK (E).
6.2 Turn (E) and choose the day or function you wish to edit and press OK (E). For example select **Monday** and press OK (E). Since a schedule day starts at 00:00, the first parameter should be **time 1 00:00** with setting **value 1 Off**. Set **time 2** for a suitable starting time in the morning, and **value 2** at appropriate stage. If more variables are required during the schedule day you set them in the same way. Set the final time for the day to value **Off** to make the unit stop for the night.
6.3 To avoid having to set all schedule days one by one you can copy monday's settings onto the rest of the week. Therefore select **Copy Mo to Fr**.

2 Acknowledge alarm
2.1 Press the alarm Button (B).
2.2 Current alarm messages are listed in the Display window (C).
2.3 Press the Alarm Button (B) again, now **Acknowledge** is displayed. Press OK (E) and turn (E) until **Execute** is selected and press OK (E) again

4 Setting Date/time
4.1 To change the Date choose on page **Main Index** Date/ Time and press OK (E).
4.2 Enter the current date by turning the Navigation Button and press OK (E) to confirm your entry.

7 Setting fan speed
7.1 Choose on page **Main Index** the menu item **Fans** (E).
7.2 Select **Supply Fan** to adjust fan speed (supply air fan) **Supply Setpoint 1-3** afterwards press OK (E) to confirm.
7.3 Select **Exhaust Fan** to change fan speed (exhaust air) **Exhaust Setpoint 1-3**. You can just change the percentage variance to supply

3 Main Switch
3.1 Choose on page **Main Index** the menu item **Main Switch** and press OK (E).
3.2 To activate the Scheduler turn (E) until **Auto** is highlighted and press OK (E). Select **Off** to turn off the device or choose on of the following operating conditions:

Eco1 (Temp Eco, fan speed 1) Com1 (Temp Com, fan speed 1)
Eco2 (Temp Eco, fan speed 2) Com2 (Temp Com, fan speed 2)

5 Setting temperature
5.1 Choose on page **Main Index** the menu item **TempSetpoints** and press OK (E).
5.2 Turn the Navigations-Button (E) until the value is highlighted you would like to change and press OK (E).
5.3 Now change the temperature.
Caution: Comf Clg must always be at least 2 °C more